


**Seats Adjustment, Front Only , (Q2J)**

From November 2012

**Audi**

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



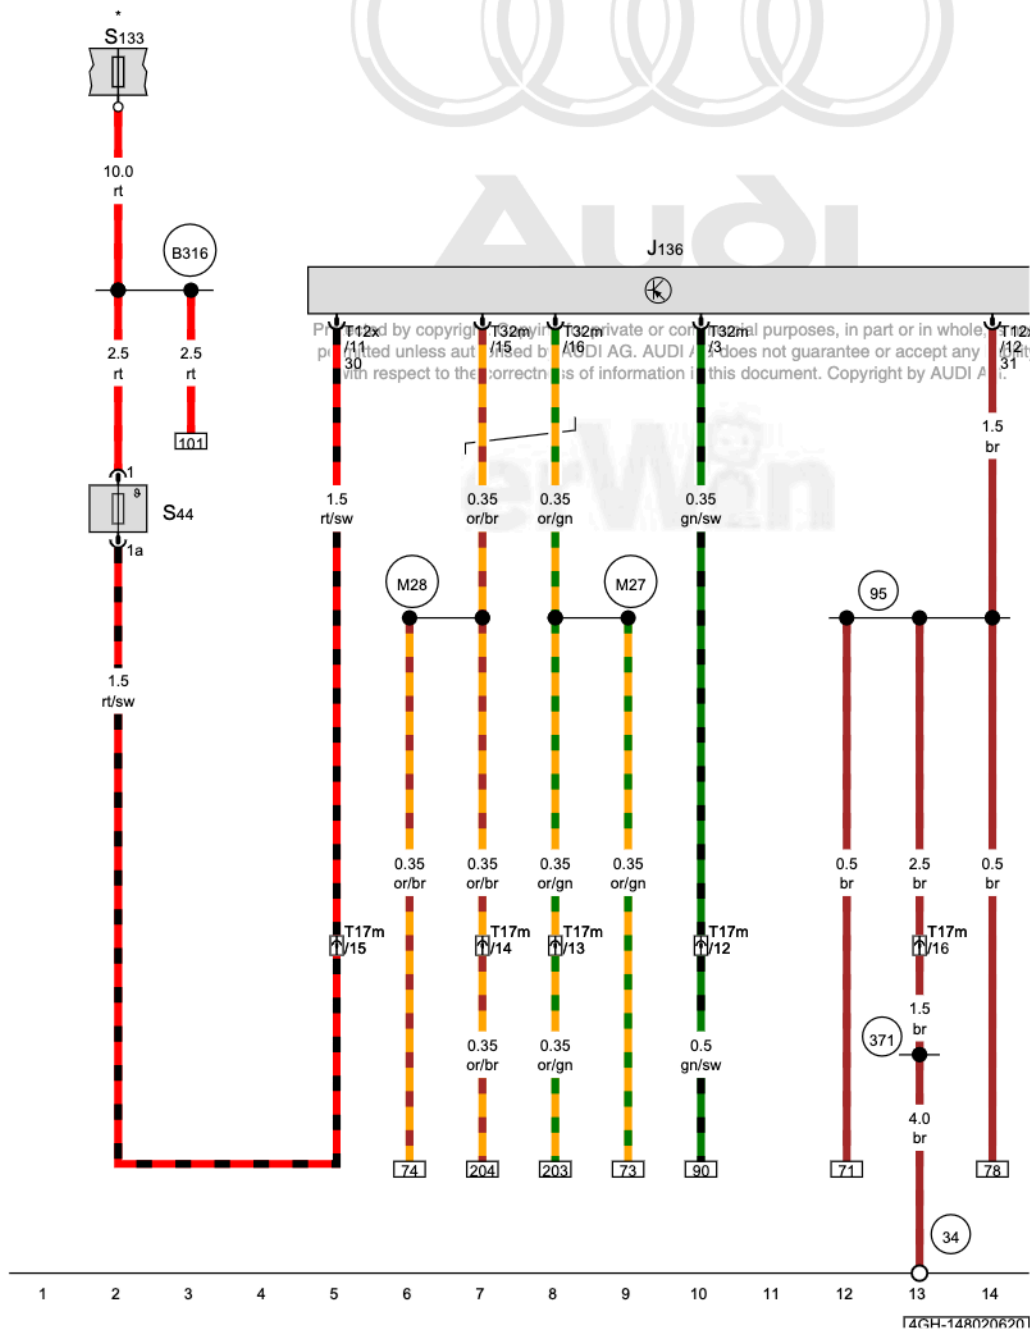

# Memory Seat/Steering Column Adjustment Control Module, Driver Power Seat Adjustment Circuit Breaker 1

- J136 Memory Seat/Steering Column Adjustment Control Module
- S44 Driver Power Seat Adjustment Circuit Breaker 1
- S133 Safety Fuse 3
- T12x 12-Pin Connector
- T17m 17-Pin Connector, In the Coupling Point for the Left Front Seat
- T32m 32-Pin Connector


- 34 Ground Connection Under Driver Seat
- 95 Ground Connection 1 (in Seat Adjustment Wiring Harness)
- 371 Ground Connection 6 (in Main Wiring Harness)
- B316 Positive Connection 2 (30a) (in Main Wiring Harness)
- M27 Comfort System CAN Bus High Connection (in Driver Seat Adjustment Wiring Harness)
- M28 Comfort System CAN Bus Low Connection (in Driver Seat Adjustment Wiring Harness)

\* Refer to Applicable Wiring Diagram for Fuse Positions

Driver Seat Switch Module 2, Driver Side Massage Function Button, Memory Seat/Steering Column Adjustment Control Module

- E418 Seat Forward/Back Adjustment Button
- E424 Seat Height Adjustment Button
- E425 Backrest Adjustment Button
- E667 Driver Seat Switch Module 2
- E670 Driver Side Massage Function Button
- J136 Memory Seat/Steering Column Adjustment Control Module
- T2kc 2-Pin Connector, In the Driver Seat
- T4cf 4-Pin Connector
- T32m 32-Pin Connector

413 Ground Connection 4 (in Seat Adjustment Wiring Harness)

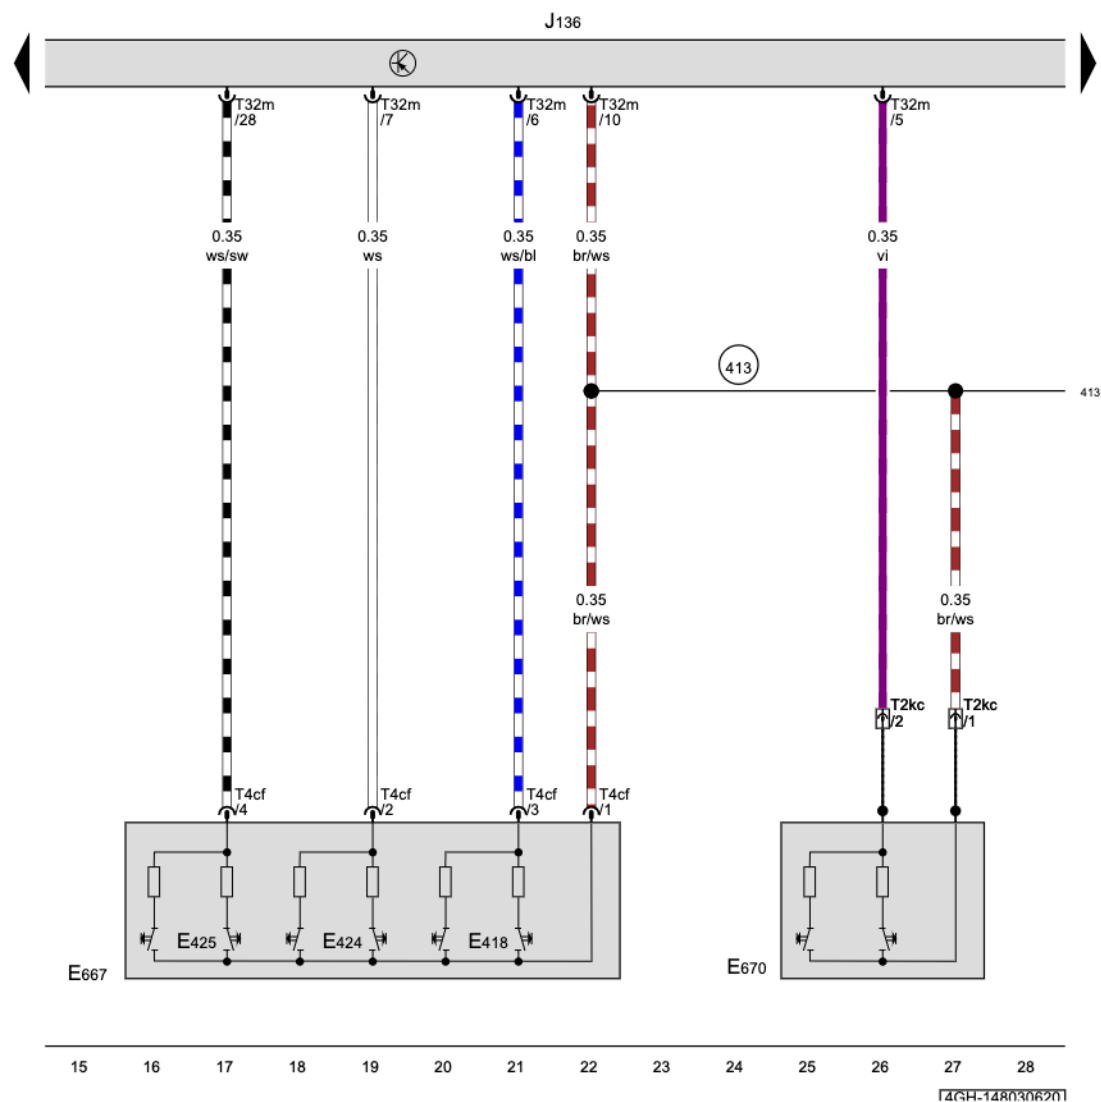

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



# Driver Seat Switch Module, Memory Seat/Steering Column Adjustment Control Module


- E96 Driver Backrest Adjustment Switch
- E222 Driver Seat Angle Adjustment Switch
- E363 Driver Seat Forward/Back Adjustment Switch
- E364 Driver Seat Height Adjustment Switch
- E663 Driver Seat Switch Module
- J136 Memory Seat/Steering Column Adjustment Control Module
- T12z 12-Pin Connector
- T32m 32-Pin Connector

413 Ground Connection 4 (in Seat Adjustment Wiring Harness)

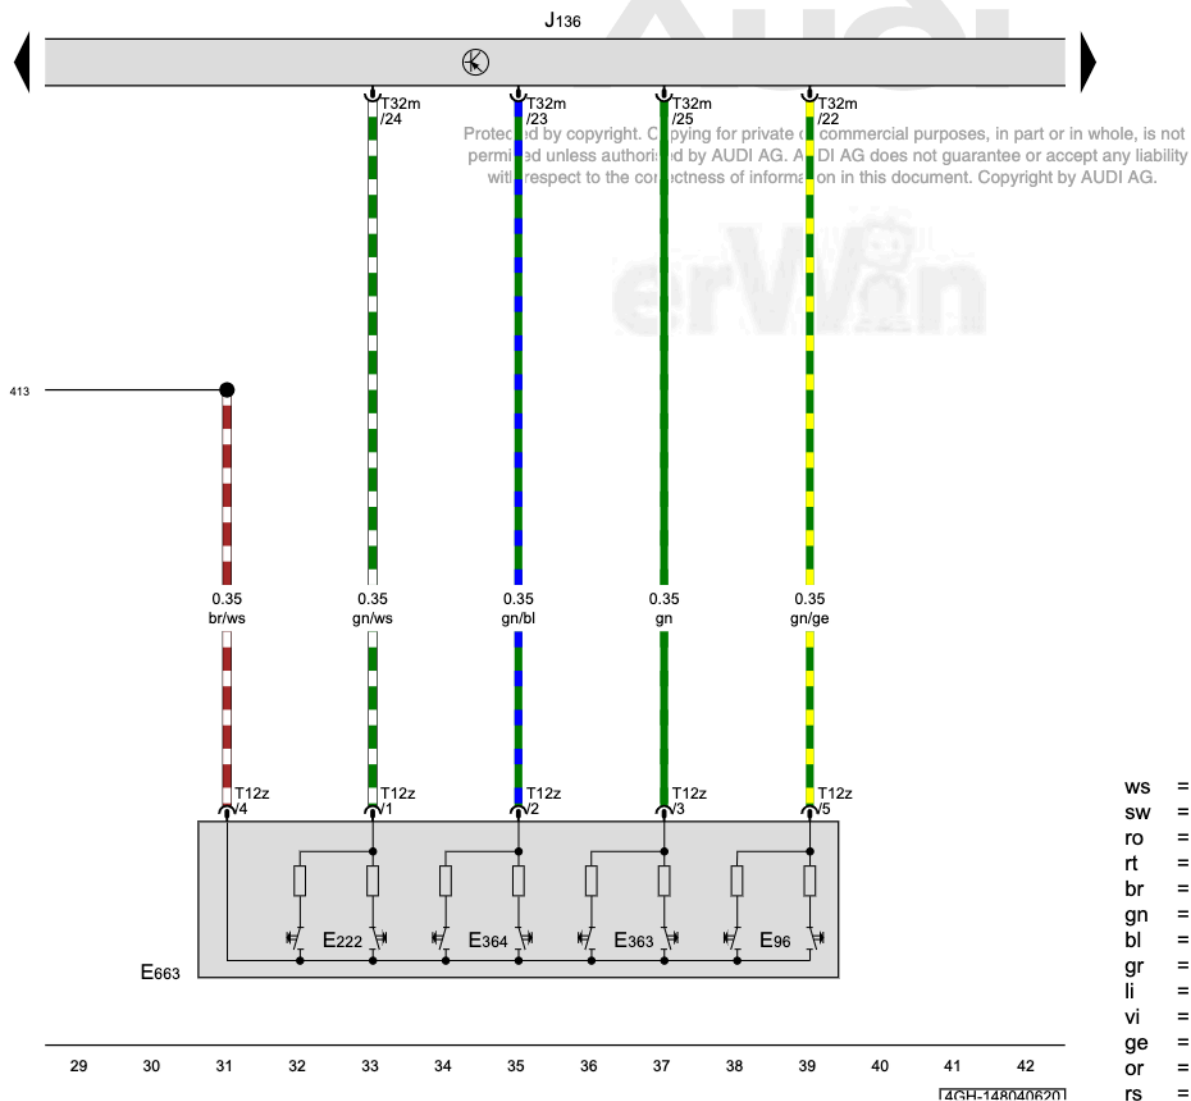

Memory Seat/Steering Column Adjustment Control Module,  
Driver Seat Height Adjustment Motor


- J136 Memory Seat/Steering Column Adjustment Control Module
- T4cg 4-Pin Connector
- T4ci 4-Pin Connector
- T4ck 4-Pin Connector
- T12x 12-Pin Connector
- V243 Driver Seat Angle Adjustment Motor
- V245 Driver Seat Height Adjustment Motor
- V256 Driver Seat Depth Adjustment Motor
- \* For RHD Vehicles

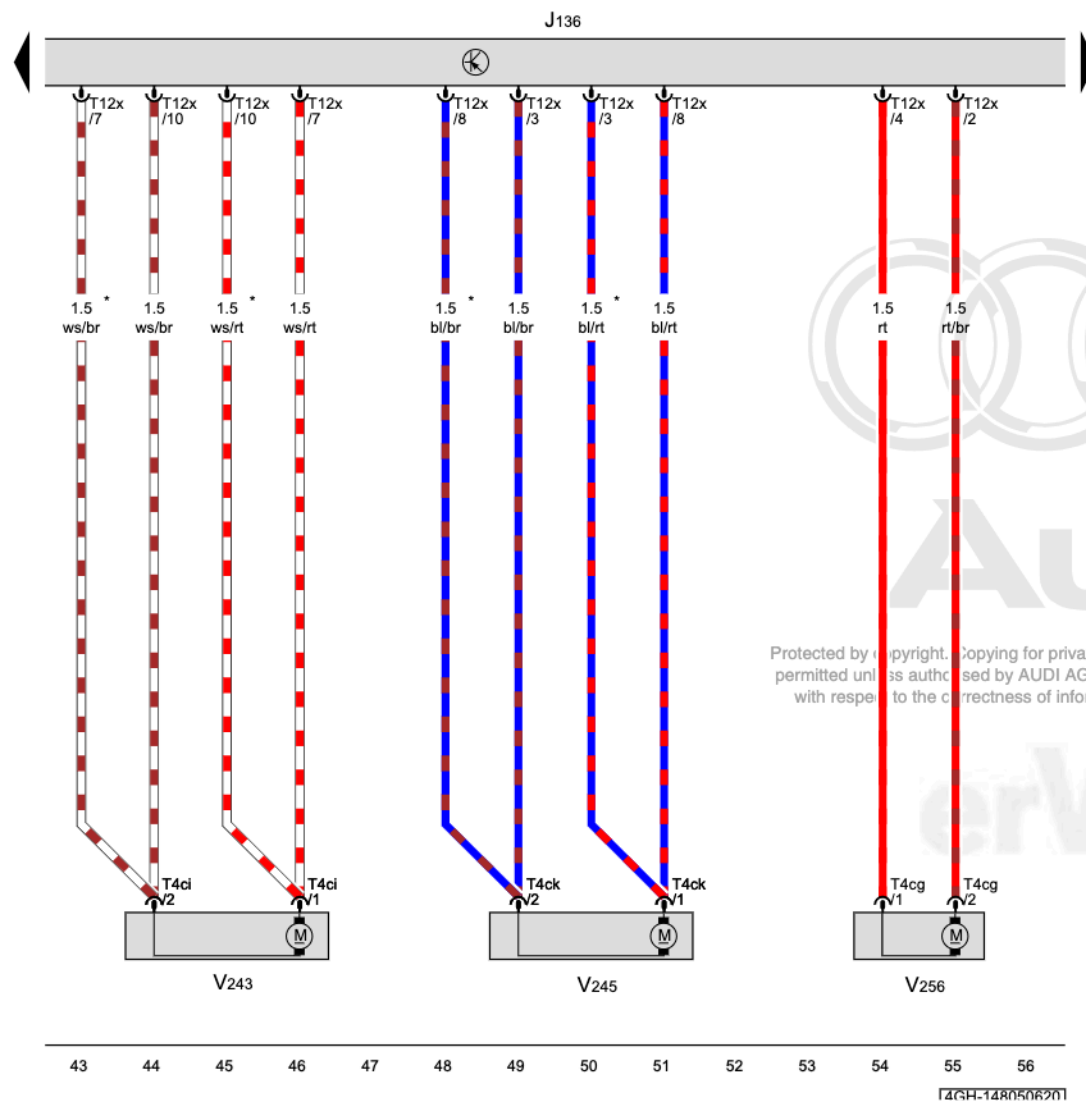


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Memory Seat/Steering Column Adjustment Control Module,  
Driver Seat Forward/Back Adjustment Motor, Driver  
Backrest Adjustment Motor

- J136 Memory Seat/Steering Column Adjustment Control Module
- T4ce 4-Pin Connector
- T4cl 4-Pin Connector
- T12x 12-Pin Connector
- T12y 12-Pin Connector, In the Driver Seat
- V28 Driver Seat Forward/Back Adjustment Motor
- V45 Driver Backrest Adjustment Motor
- \* For RHD Vehicles

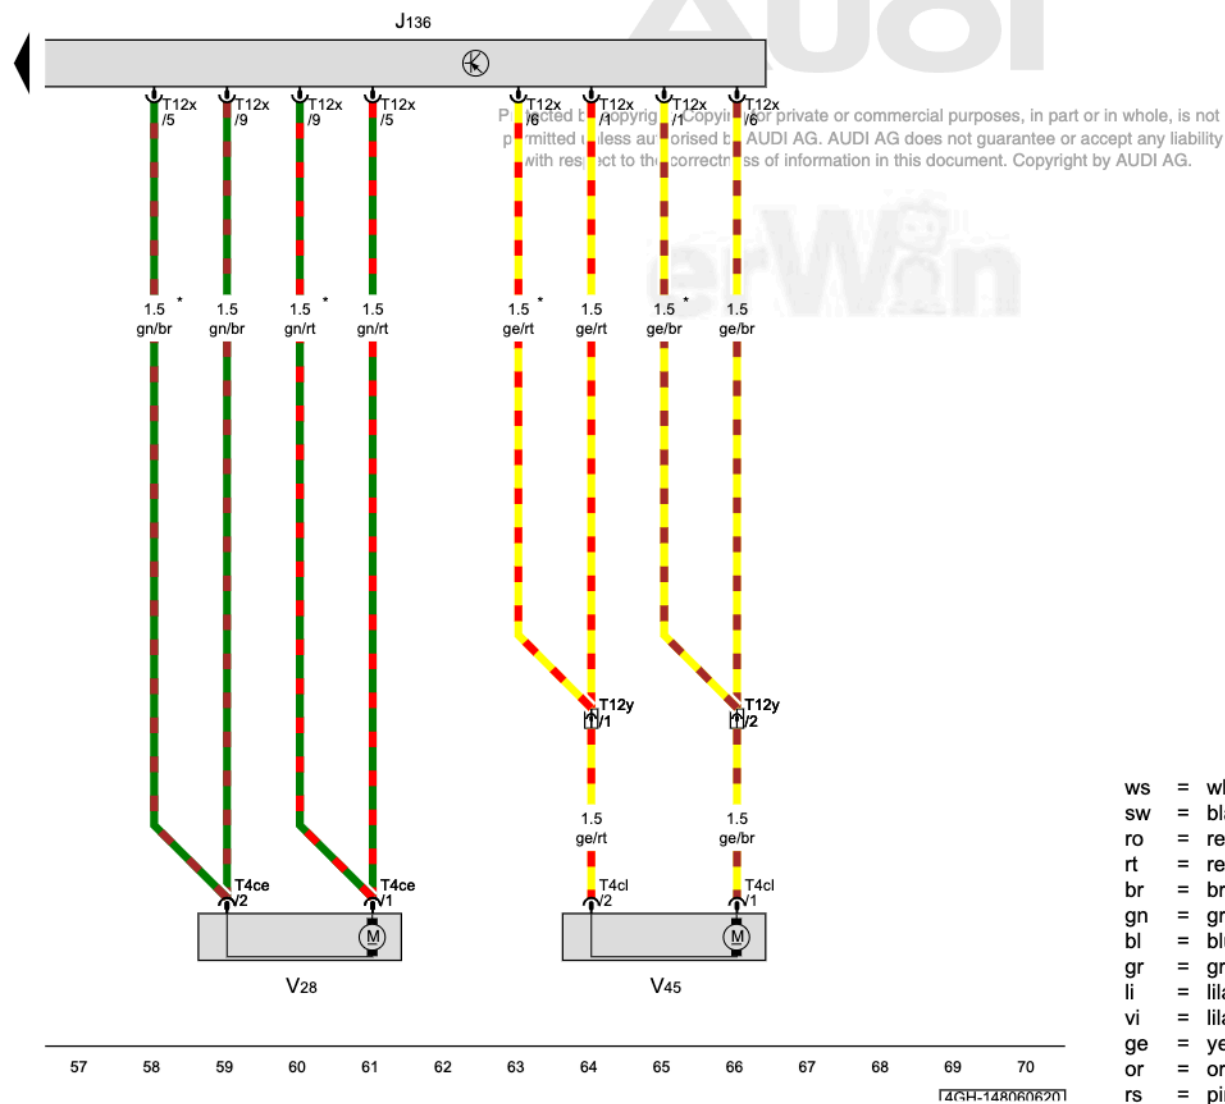


Driver Multi-Contour Seat Control Module, Valve Block 1 in Driver Seat, Valve Block 2 in Driver Seat, Valve Block 3 in Driver Seat, Driver Multi-Contour Seat Compressor

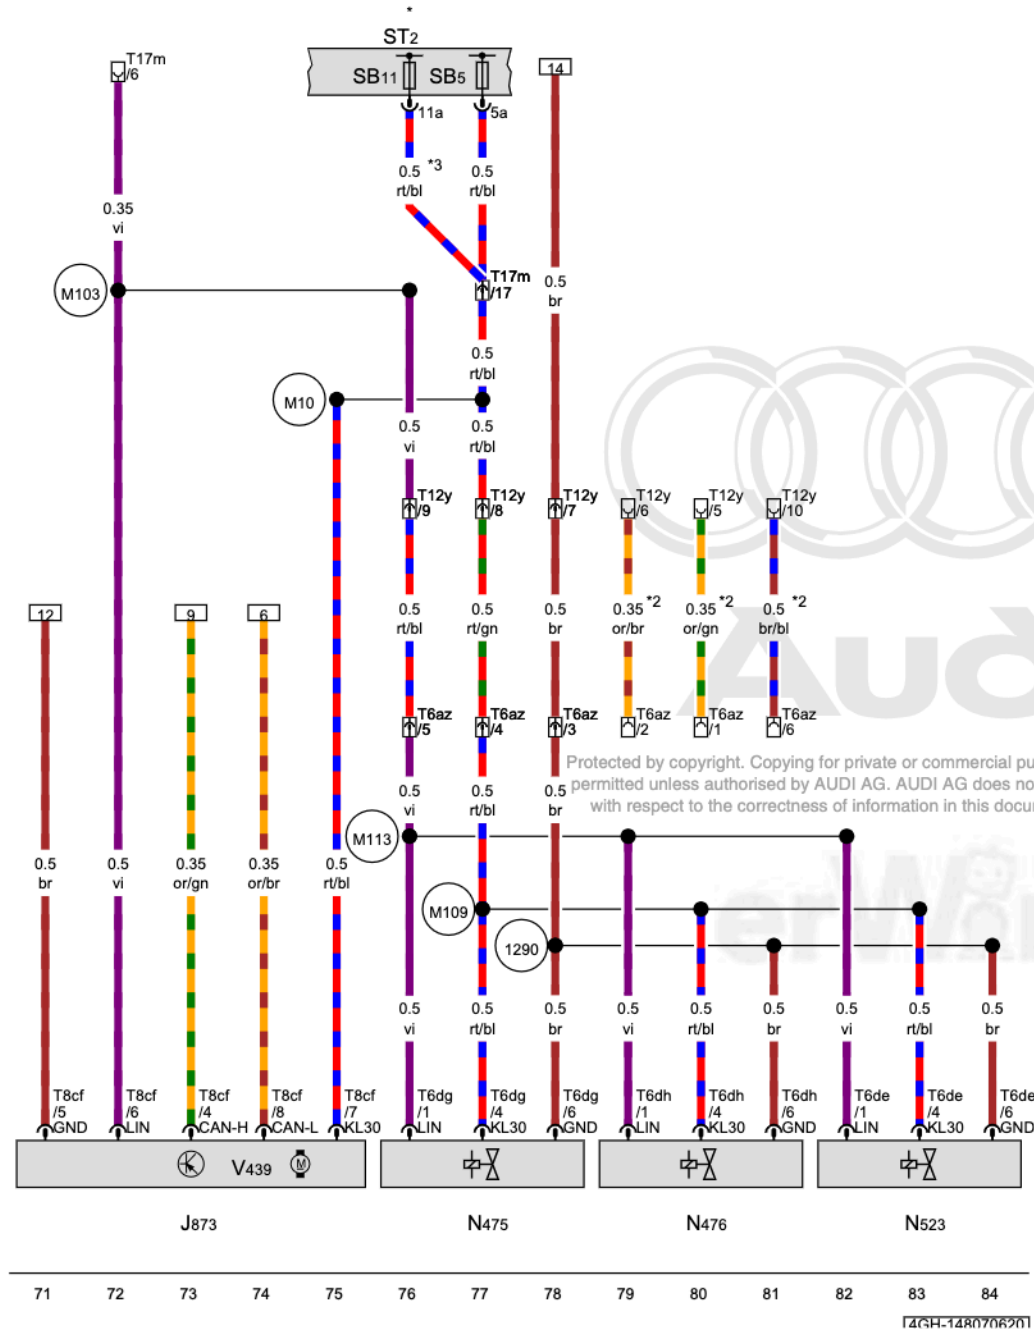

Driver Memory Seat Control Head, Emergency Off Button, Driver Door Control Module

- E97 Driver Memory Seat Control Head
- E190 Emergency Off Button
- E218 Memory Seat Position 1 Button
- E219 Memory Seat Position 2 Button
- E283 Driver Seat Memory Button
- J386 Driver Door Control Module
- T10o 10-Pin Connector
- T20e 20-Pin Connector
- T27a 27-Pin Connector, On the Left A-Pillar
- T32k 32-Pin Connector

- 267 Ground Connection 2 (in Driver Door Wiring Harness)
- R52 Connection 58S (in Driver Door Wiring Harness)

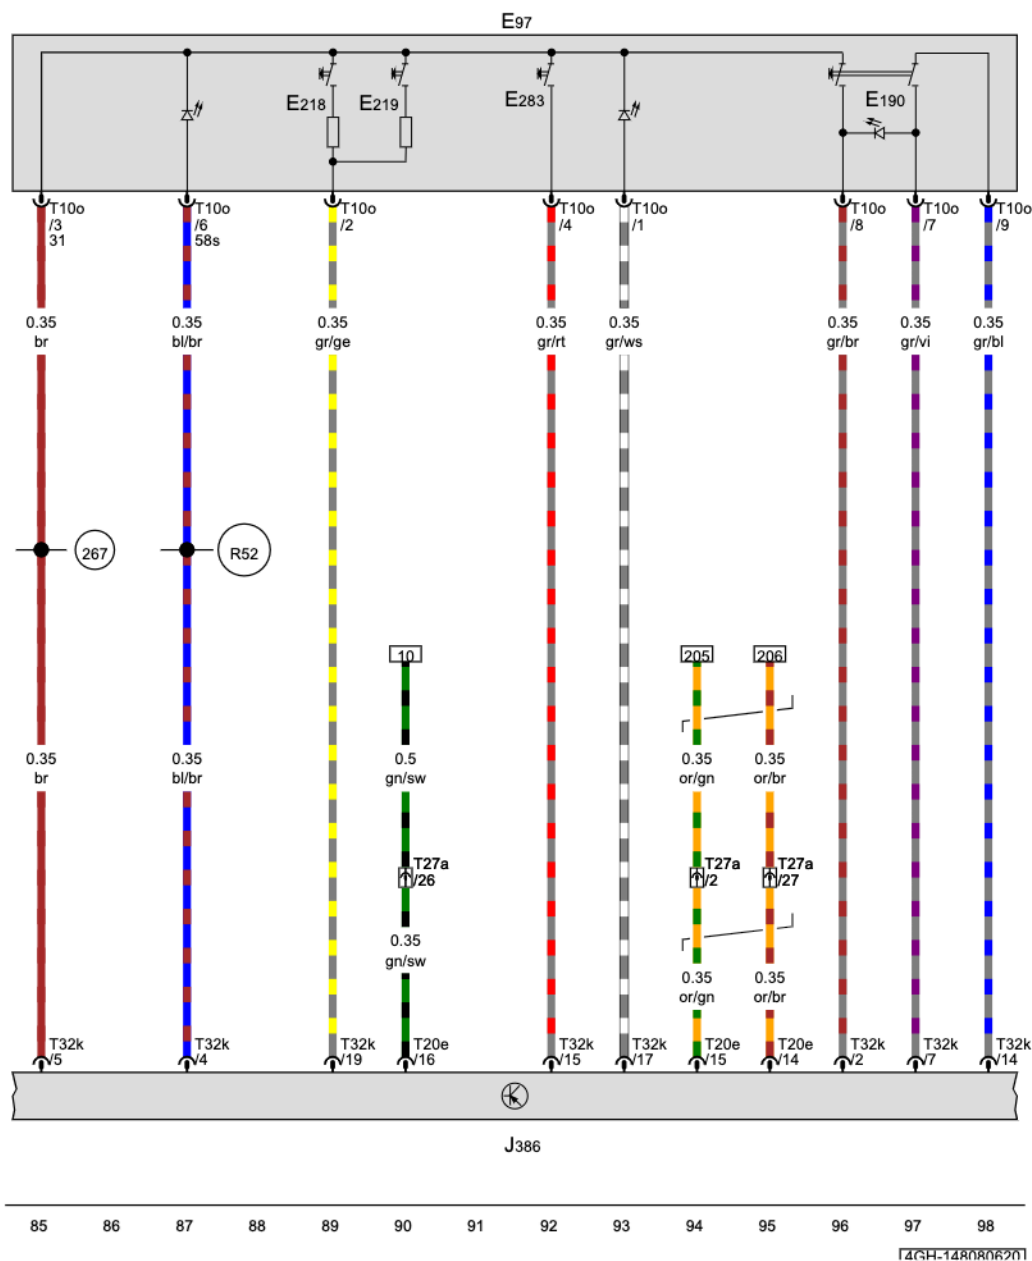


Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin



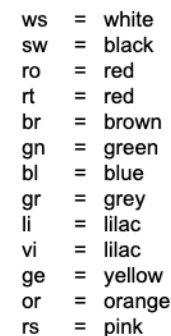


Front Passenger Seat Switch Module 2, Front Passenger Massage Function Button, Front Passenger Memory Seat Control Module

- E418 Seat Forward/Back Adjustment Button
- E424 Seat Height Adjustment Button
- E425 Backrest Adjustment Button
- E668 Front Passenger Seat Switch Module 2
- E671 Front Passenger Massage Function Button
- J521 Front Passenger Memory Seat Control Module
- T2ko 2-Pin Connector
- T4ed 4-Pin Connector
- T32n 32-Pin Connector

413 Ground Connection 4 (in Seat Adjustment Wiring Harness)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

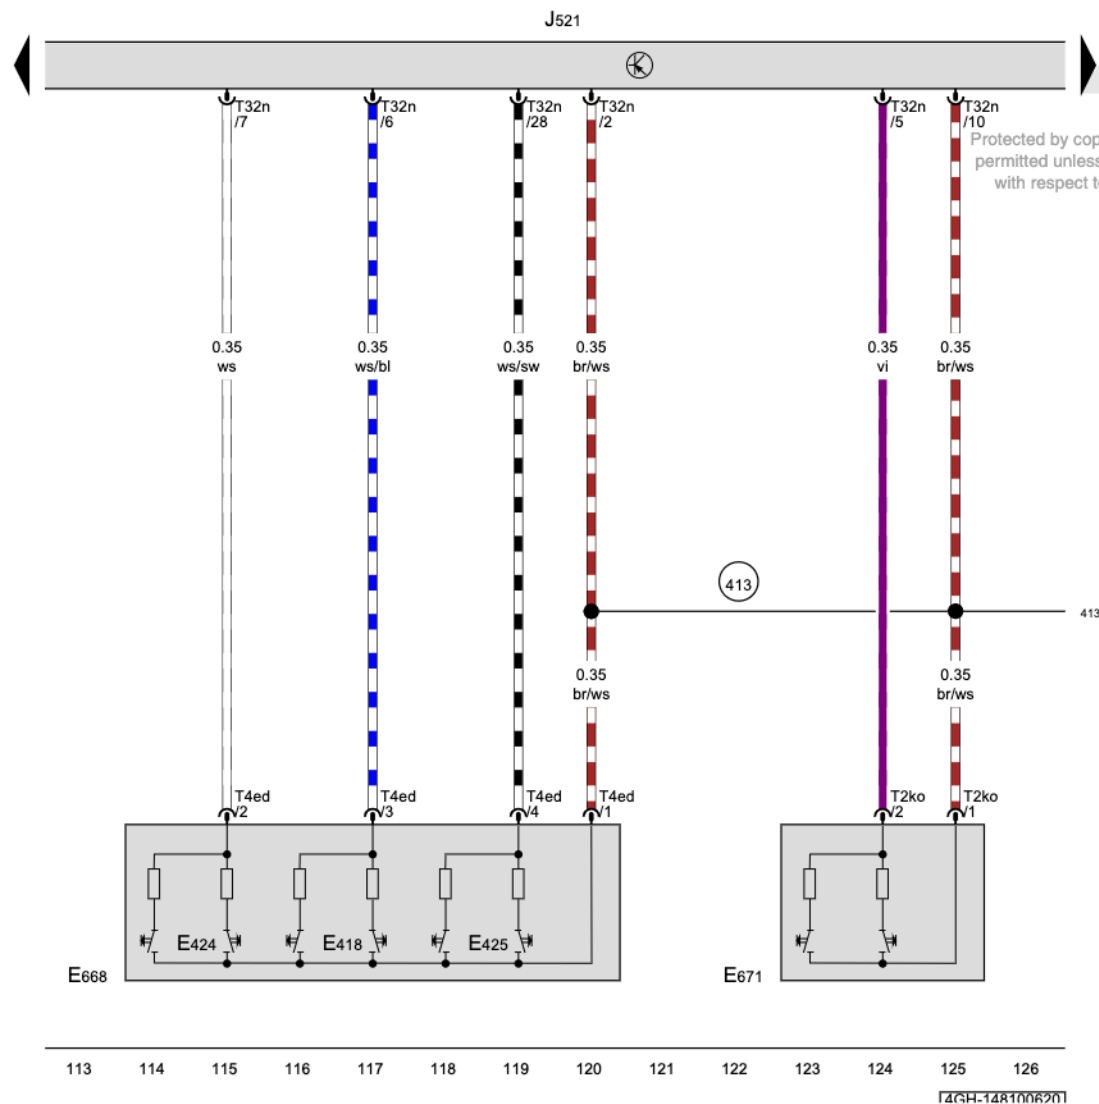


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Front Passenger Seat Switch Module, Front Passenger Memory Seat Control Module

- E64 Front Passenger Seat Forward/Back Adjustment Switch
- E98 Front Passenger Backrest Adjustment Switch
- E334 Front Passenger Seat Angle Adjustment Button
- E365 Front Passenger Seat Height Adjustment Switch
- E664 Front Passenger Seat Switch Module
- J521 Front Passenger Memory Seat Control Module
- T12ac 12-Pin Connector
- T32n 32-Pin Connector

413 Ground Connection 4 (in Seat Adjustment Wiring Harness)

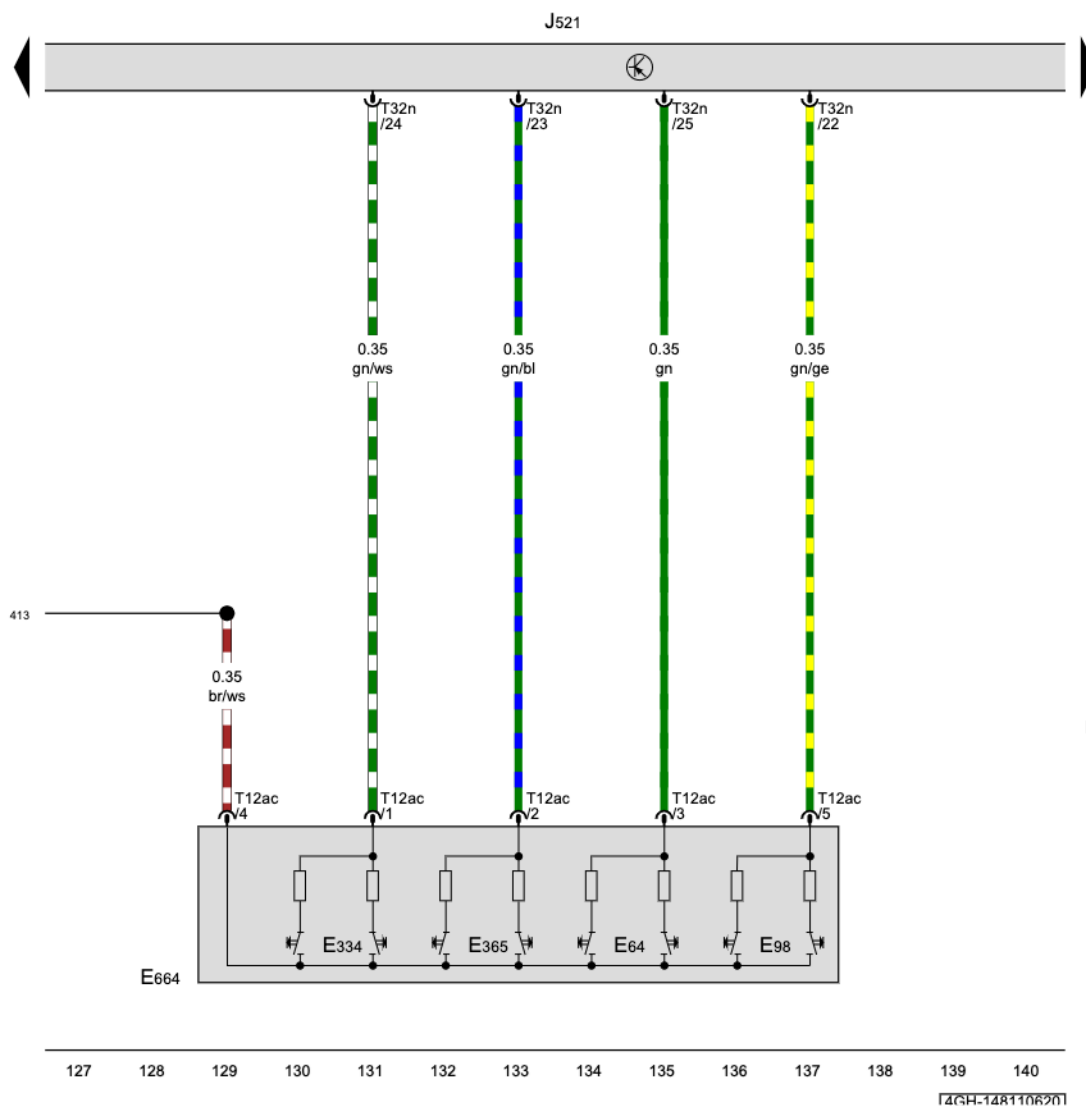


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white  
 sw = black  
 ro = red  
 rt = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 vi = lilac  
 ge = yellow  
 or = orange  
 rs = pink

Front Passenger Memory Seat Control Module, Front Passenger Seat Angle Adjustment Motor, Front Passenger Seat Height Adjustment Motor

- J521 Front Passenger Memory Seat Control Module
- T4cn 4-Pin Connector
- T4co 4-Pin Connector
- T4cp 4-Pin Connector
- T12aa 12-Pin Connector
- V244 Front Passenger Seat Angle Adjustment Motor
- V246 Front Passenger Seat Height Adjustment Motor
- V257 Front Passenger Seat Depth Adjustment Motor
- \* Comfort CAN Bus
- \*2 For RHD Vehicles

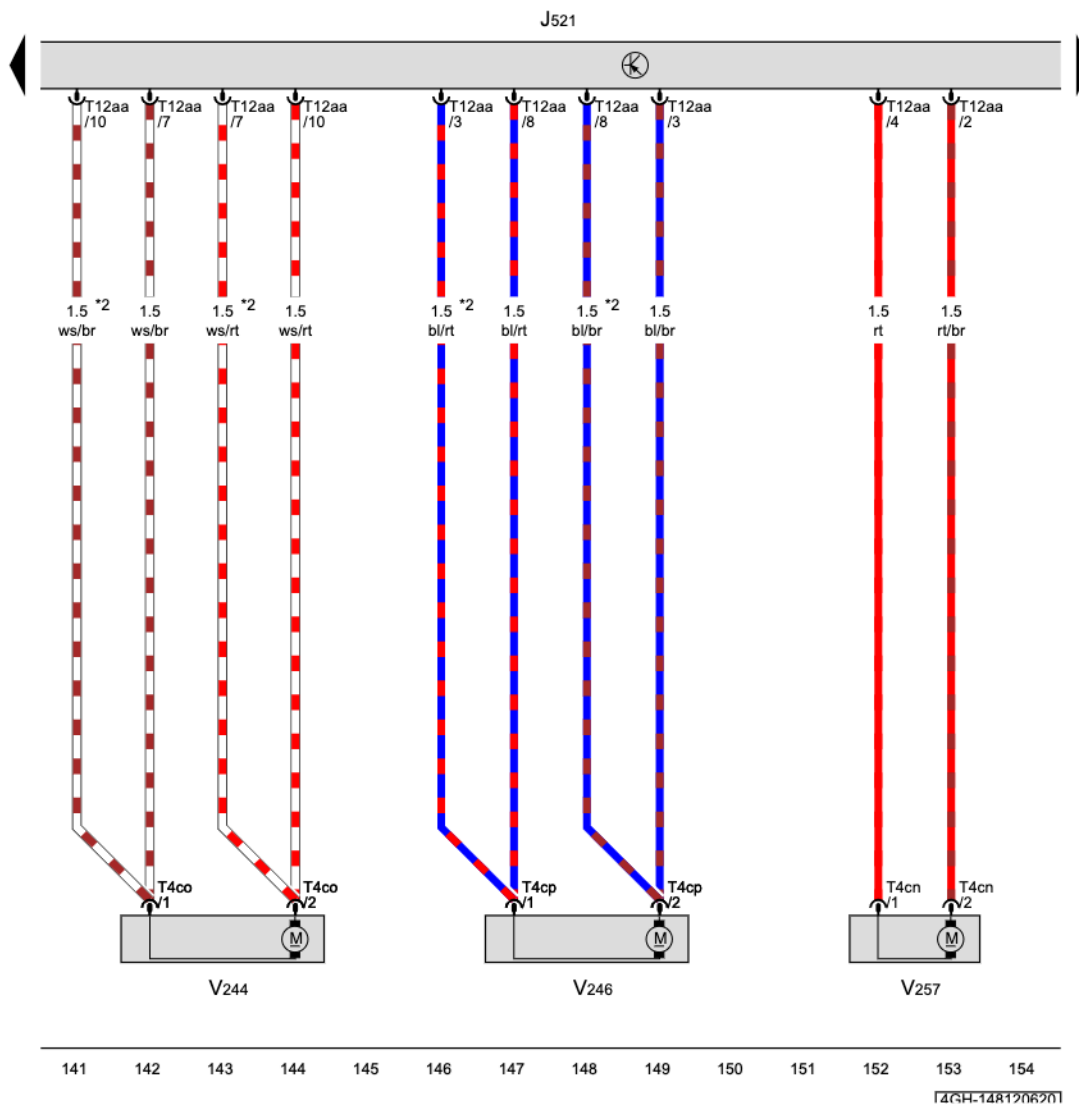


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Front Passenger Memory Seat Control Module, Front Passenger Multi-Contour Seat Control Module, Front Passenger Seat Forward/Back Adjustment Motor, Front Passenger Backrest Adjustment Motor

- J521 Front Passenger Memory Seat Control Module
- J872 Front Passenger Multi-Contour Seat Control Module
- T4cm 4-Pin Connector
- T4eg 4-Pin Connector
- T8cg 8-Pin Connector, Black
- T12aa 12-Pin Connector
- T12ab 12-Pin Connector, In the Front Passenger Seat
- V31 Front Passenger Seat Forward/Back Adjustment Motor
- V46 Front Passenger Backrest Adjustment Motor
- \* For RHD Vehicles

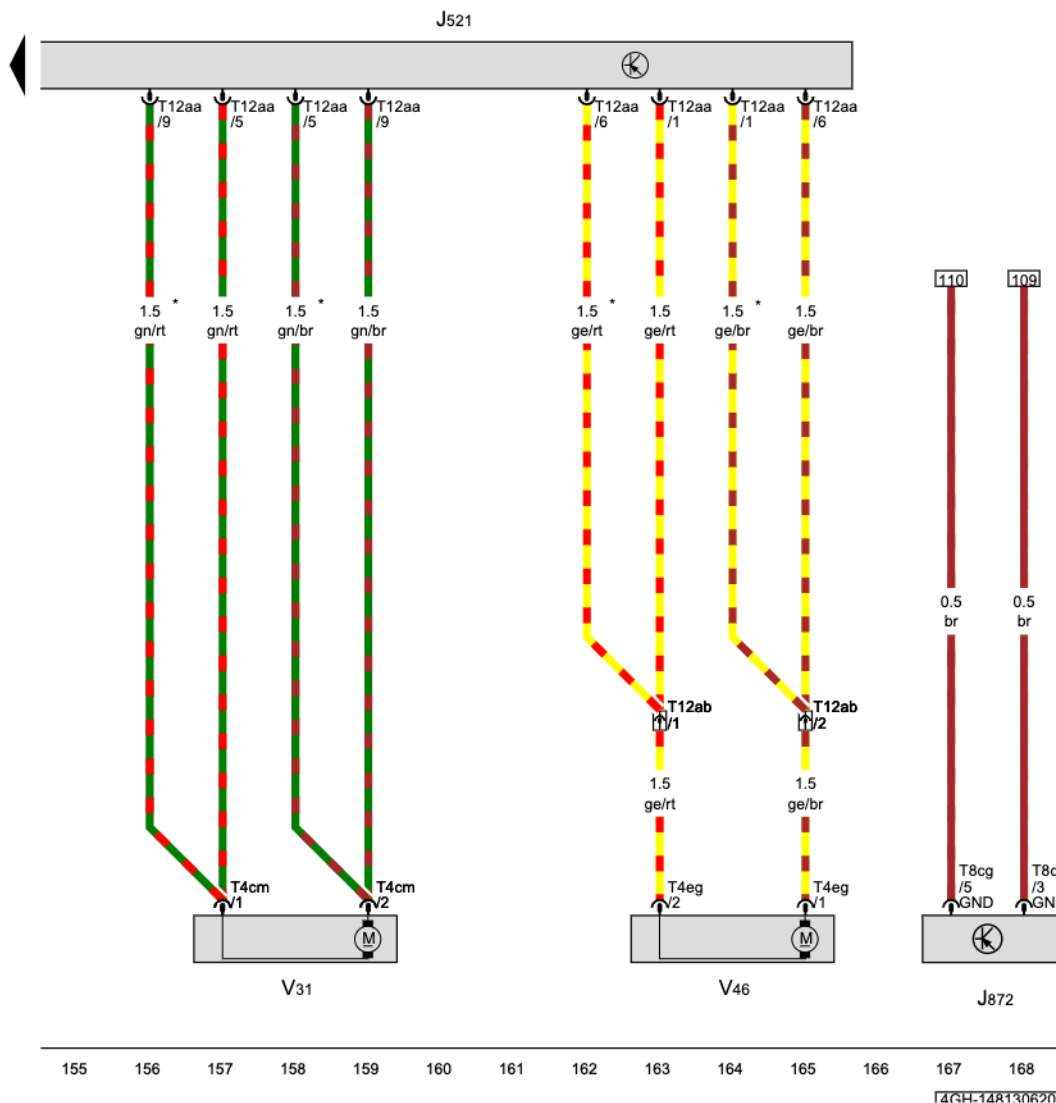

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

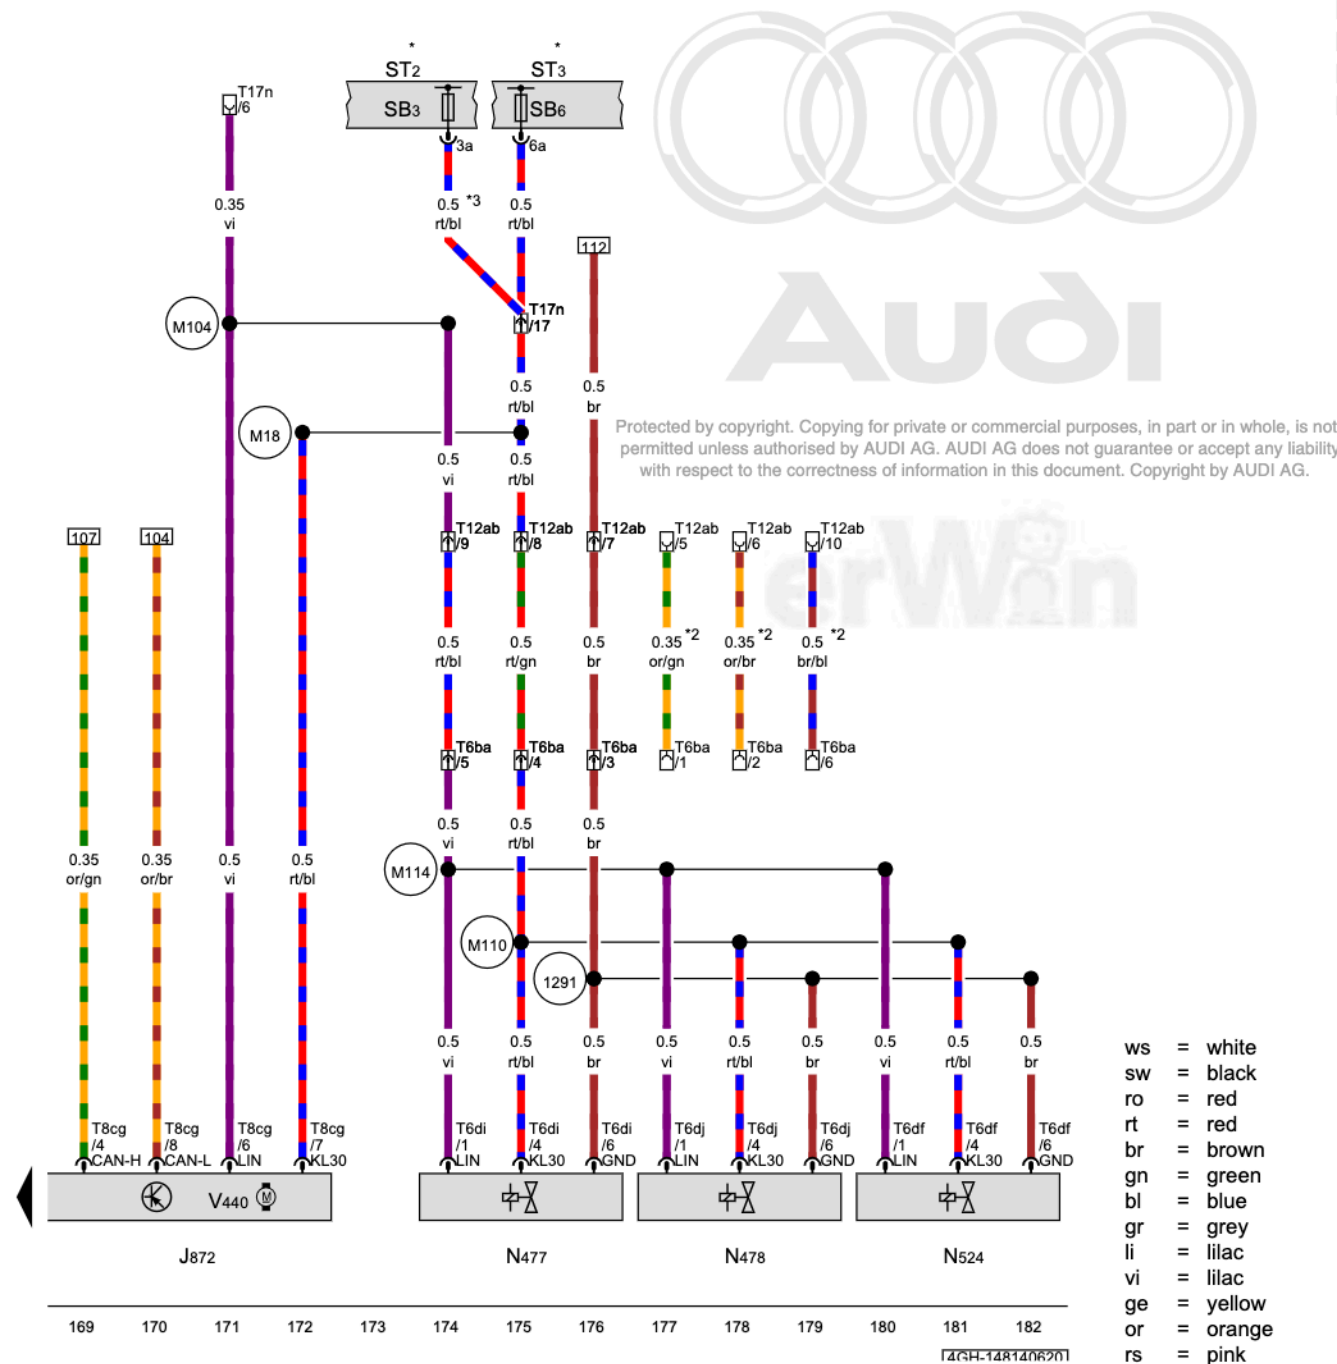

Front Passenger Multi-Contour Seat Control Module, Valve Block 1 in Front Passenger Seat, Valve Block 2 in Front Passenger Seat, Valve Block 3 in Front Passenger Seat, Front Passenger Multi-Contour Seat Compressor

- J872 Front Passenger Multi-Contour Seat Control Module
- N477 Valve Block 1 in Front Passenger Seat
- N478 Valve Block 2 in Front Passenger Seat
- N524 Valve Block 3 in Front Passenger Seat
- ST2 Fuse Panel 2
- SB3 Fuse 3 (On Fuse Panel B)
- ST3 Fuse Panel 3
- SB6 Fuse 6 (On Fuse Panel B)
- T6ba 6-Pin Connector, In the Front Passenger Seat
- T6df 6-Pin Connector
- T6di 6-Pin Connector
- T6dj 6-Pin Connector
- T8cg 8-Pin Connector, Black
- T12ab 12-Pin Connector, In the Front Passenger Seat Backrest
- T17n 17-Pin Connector, In the Coupling Point for the Right Front Seat
- V440 Front Passenger Multi-Contour Seat Compressor

- 1291 Ground Connection 1 (in Right Front Seat Wiring Harness)
- M18 Connection 1 (in Front Passenger Seat Adjustment Wiring Harness)
- M104 LIN Bus Connection 1 (in Right Front Seat Wiring Harness)
- M110 Connection 1 (30) (in Right Front Seat Wiring Harness)
- M114 LIN Bus Connection 2 (in Right Front Seat Wiring Harness)

- \* Refer to Applicable Wiring Diagram for Fuse Positions
- \*2 Not Used
- \*3 From June 2014

Front Passenger Memory Seat Control Head, Passenger Side Emergency -Off- Button, Front Passenger Door Control Module


- E277 Front Passenger Memory Seat Control Head
- E338 Memory Seat Positions 1 and 2 Button
- E340 Front Passenger Memory Seat Button
- E466 Passenger Side Emergency -Off- Button
- J387 Front Passenger Door Control Module
- T10r 10-Pin Connector
- T20f 20-Pin Connector
- T27b 27-Pin Connector, On the Right A-Pillar
- T32l 32-Pin Connector

268 Ground Connection 2 (in Front Passenger Door Wiring Harness)

R53 Connection 58S (in Front Passenger Door Wiring Harness)


\* Comfort CAN Bus

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted without the express written permission of AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

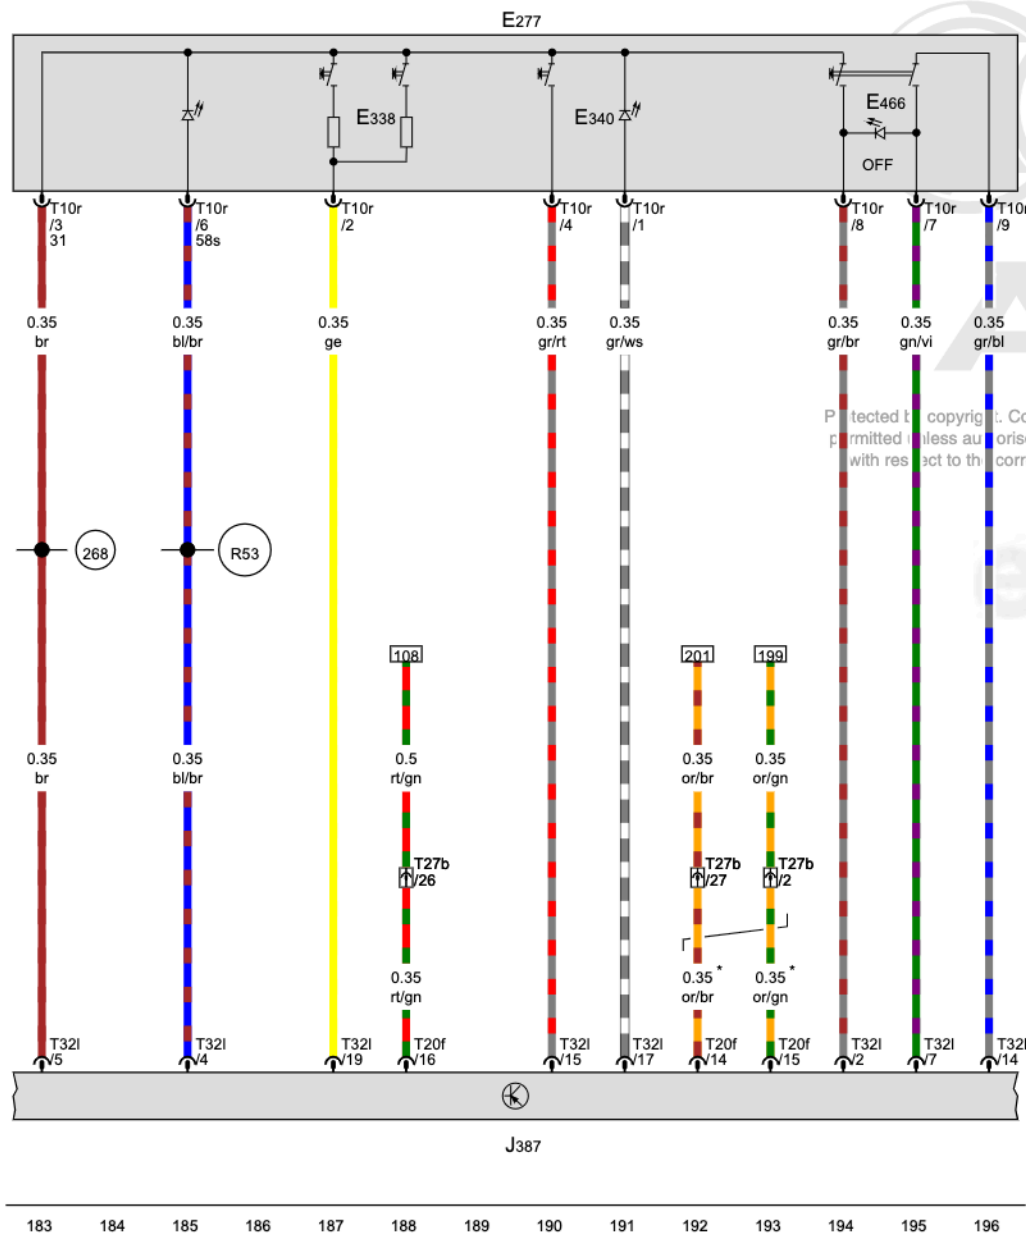

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink



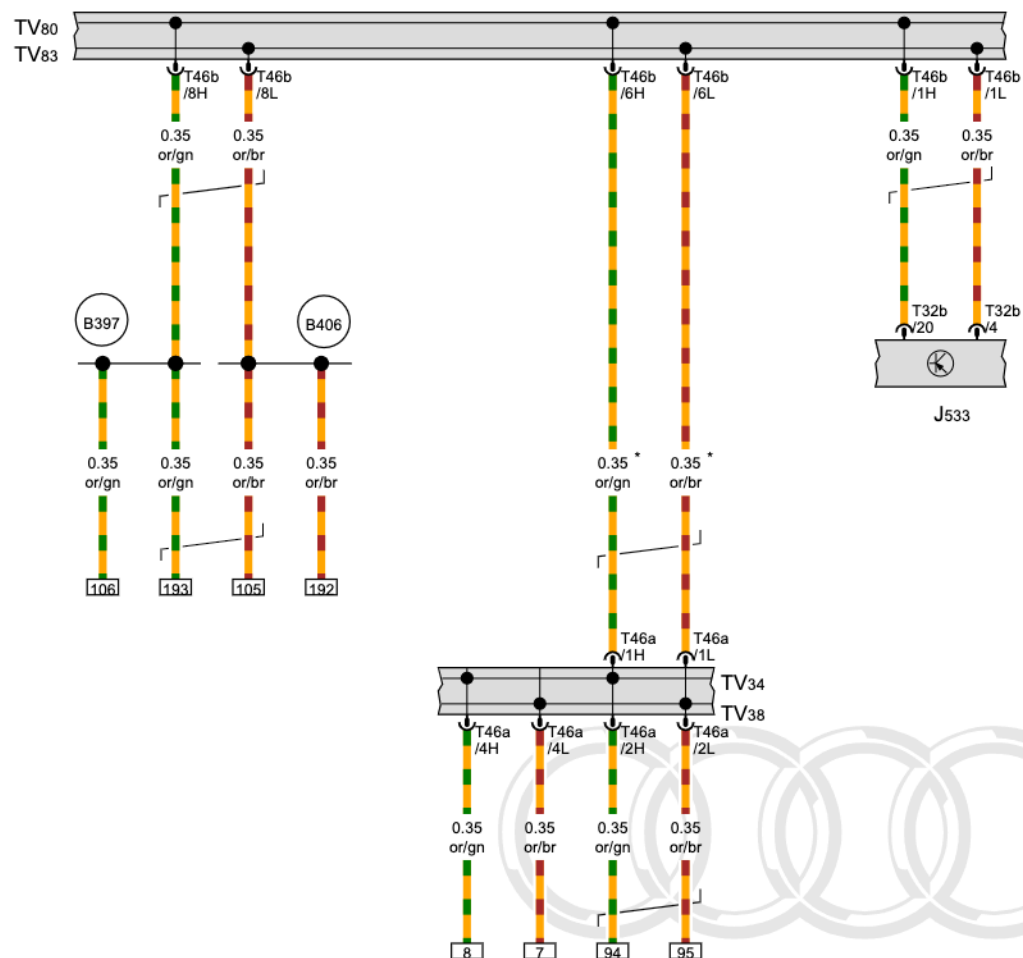

Data Bus on Board Diagnostic Interface, Comfort System  
CAN Bus High Wire Junction, Comfort System CAN Bus  
Low Wire Junction, Comfort System CAN Bus Low Wire  
Junction 2

- J533 Data Bus on Board Diagnostic Interface
- T32b 32-Pin Connector
- T46a 46-Pin Connector
- T46b 46-Pin Connector
- TV34 Comfort System CAN Bus High Wire Junction
- TV38 Comfort System CAN Bus Low Wire Junction
- TV80 Comfort System CAN Bus High Wire Junction 2
- TV83 Comfort System CAN Bus Low Wire Junction 2
- B397 Comfort System CAN Bus High Connection 1 (in Main Wiring Harness)
- B406 Comfort System CAN Bus Low Connection 1 (in Main Wiring Harness)
- \* Data Bus Wire (CAN Bus)

ws = white  
sw = black  
ro = red  
rt = red  
br = brown  
gn = green  
bl = blue  
gr = grey  
li = lilac  
vi = lilac  
ge = yellow  
or = orange  
rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.